

User manual

Dolphin Care UVC Air Sterilizer
Model: Small, Large & Industrial model

Usage


This UVC Air Sterilizer is used for sterilizing the air inside.

The device is equipped with UVC-lamps, which destroy the RNA/DNA from bacteria, fungi and viruses.

The combination of filters reduces the airborne CFUs down to a size of 0,2 μm with 99,995 percentage and eliminates bad odor.

How to use

1. Place the UVC Air Sterilizer in the corner of the room or a long the wall
2. Activate the breaks on the wheels
3. Plug in the cable in a power socket with **earth** connection
4. Push the start button at the bottom of the unit

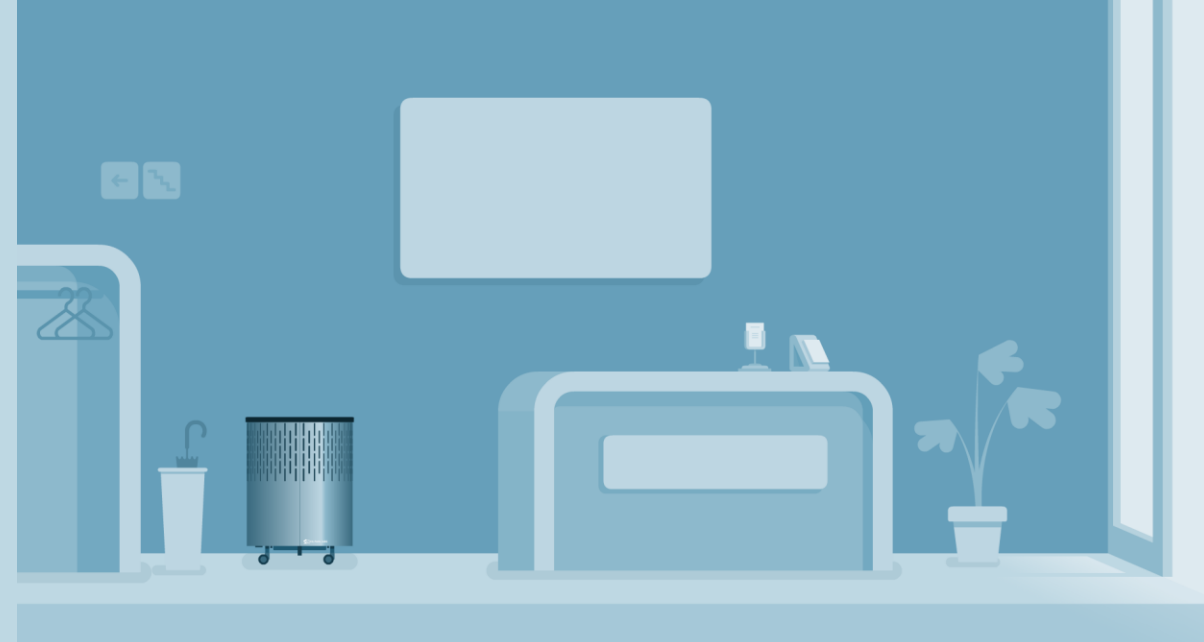

NB

Place the cable in a safe position to avoid fall accidents

Do NOT cover the Air Sterilizer with anything

High capacity – day and night mode

Small UVC Air Sterilizer:

Processes 400 m³ air/hour during daytime and 200 m³ air/hour during nighttime.


Large UVC Air Sterilizer:

Processes 800 m³ air/hour during daytime and 400 m³ air/hour during nighttime.

Industrial model UVC Air Sterilizer:

Processes 1.030 m³ air/hour – wall mounting

Upon delivery we will set the timer to run day/night mode according to your instruction.

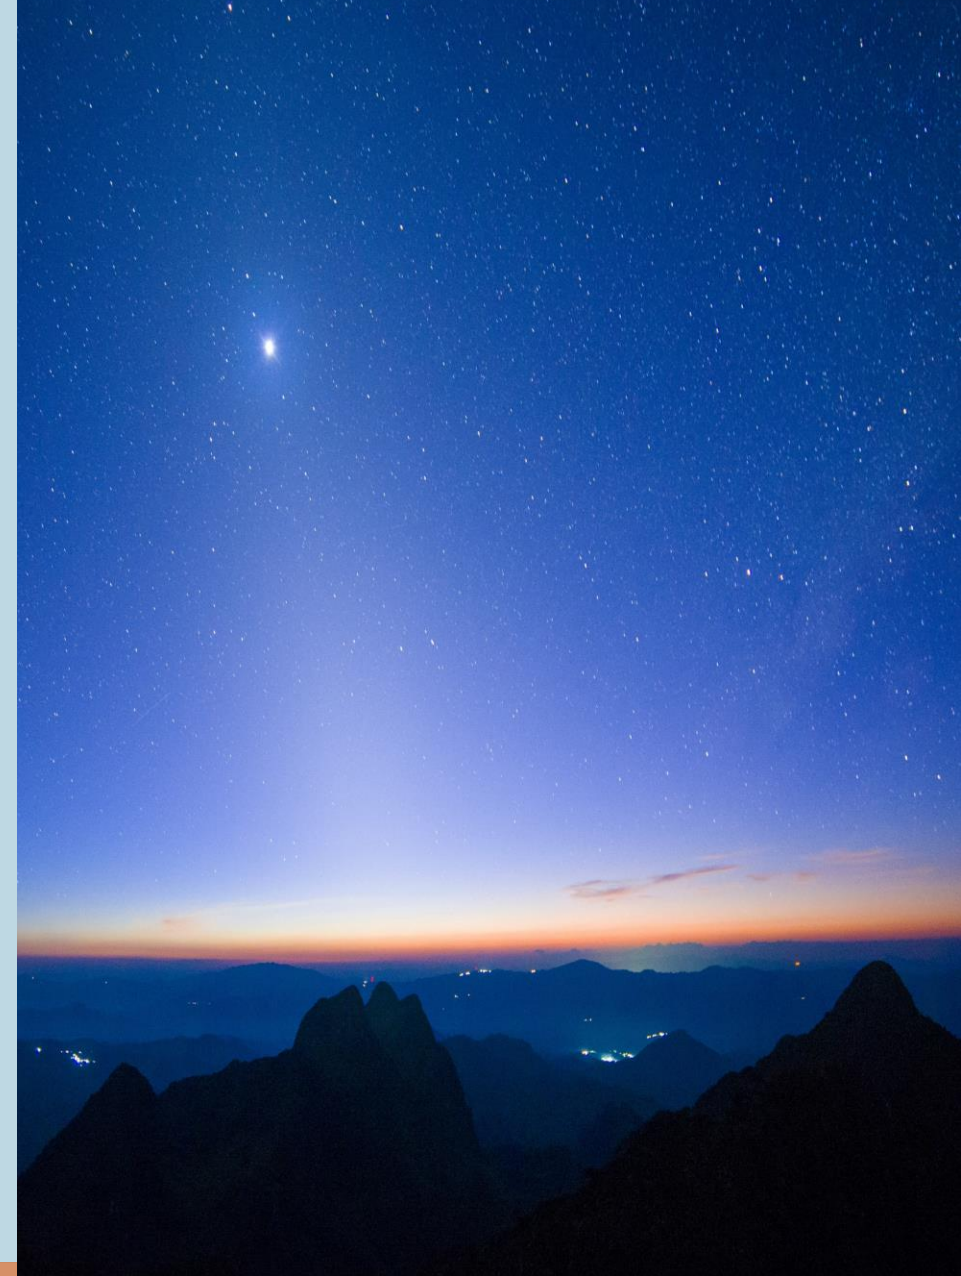

Maintenance

To keep the high efficacy and continuous delivery of sterilized air the **filters** and **UVC-lamps** must be **replaced once a year** with similar components.

Contact your local distributor of Dolphin Care products to order similar components or sign up for a service agreement.

SAFETY WARNINGS

The Air Sterilizer is equipped with UVC-lamps inside.

In case of a broken UVC lamp, you must

- ✓ air out for 30 minutes
- ✓ sweep up the broken glass
- ✓ treat it as hazardous waste



Contact information

Head-office

Dolphin Care ApS
11, Unionsvej
DK-4600 Koege

Tel: +45 7174 1379

Mail: info@dolphincare.net

WWW: dolphincare.net

Local representative

TBN

Tel: +

Mail:

WWW:

